

HOLLOWICK TABLE LAMPS

CARE OF HOLLOWICK PRODUCTS



BASES



Hollowick lamp bases are coated with a specially formulated finish that protects and enhances the beauty of the lamps. These bases should be cleaned as necessary with a spray furniture wax. This will leave a protective shine and allow for easy cleaning in the future.

NOTE: Do Not put any Hollowick lamp base in a dishwasher!

GLOBES

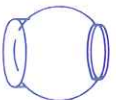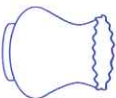

Keep Hollowick globes sparkling clean by regularly handwashing them with warm water and a mild detergent.

NOTE: Commercial dishwashing detergents may spot or dull fired-on colors.

REFILLABLE FUEL CONTAINERS

Water contamination may occur in the refillable fuel container as the result of condensation or through the use of contaminated fuel. This is easily identified by the "beading" characteristics of water in the bottom of the container. This water will cause rusting if the containers are allowed to remain empty; therefore, a fuel level *must* be maintained in the container.

If you find water in the fuel, empty the contaminated fuel, add fresh fuel, insert a new wick and burner unit. *DO NOT* reinsert the old wick into fresh fuel. Instead, place the complete assembly aside, allow to dry completely, and re-use at a later date.

ONLY HOLLOWICK FUEL
RECOMMENDED FOR USE




SNUFFER
#900

HOLLOWICK LAMP INSTRUCTIONS

FOR

Refillable Fuel Cells with Permawick

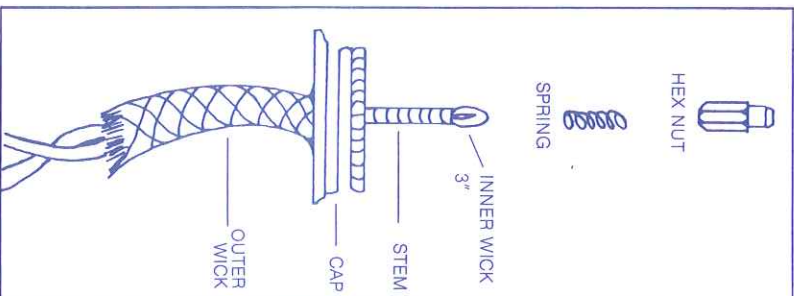

3" BURNER ASSEMBLY - #963

1. Filling and Wick Setting:

Remove snuffer. Unscrew cap and remove. Fill reservoir with Hollowick Liquid Paraffin to within 1/2" of top of neck. *Do not over fill. Never fill near open flame.* Replace cap and tighten. Wipe any spilled fuel from around reservoir cap. Inner wick should protrude 1/16" above threaded stem. Adjust hex nut to accomplish this.

2. Safety Feature:

Replace the safety snuffer. Be sure 1/4" of hex nut protrudes above top of snuffer. Safety snuffer is designed to fall off if lamp is tipped over. This will automatically extinguish the flame.

3. Flame Adjustment:

Allow 30 minutes for new wicks to absorb fuel before lighting. Flame height may be adjusted by turning snuffer. Do not allow flame height to exceed 1". To extinguish, blow flame out.


4. Wick Seasoning:

During the seasoning period for new wicks (first 10-15 hours of burning time) you will note a slight odor from the cotton wick and some wetness around the burner stem. This will disappear after the wick is "seasoned."

5. Wicks:

These lamps are equipped with our new Permawick wicking. During the first several uses, the cotton cover of the inner wick will burn away, leaving the permanent element of Permawick exposed. This permanent tip will not burn away, giving you a constant flame setting use after use.

IMPORTANT: Should it become necessary to pull up more inner wicking, do not try to do so by pulling on the exposed tip of the permawick. Remove the hex nut to expose the unburned cotton cover of the inner wick. Pinch this tightly and pull up more inner wicking. Replace the hex nut. The exposed tip of the permawick should protrude 1/16".

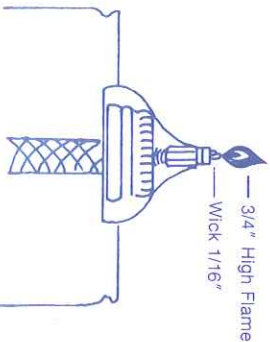

COMPLETE ASSEMBLY
REFILLABLE CONTAINER

P.O. BOX 305
MANLIUS, N.Y. 13104